












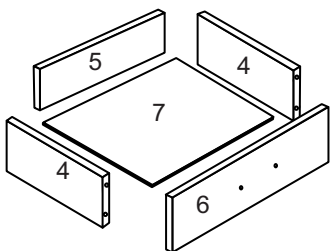

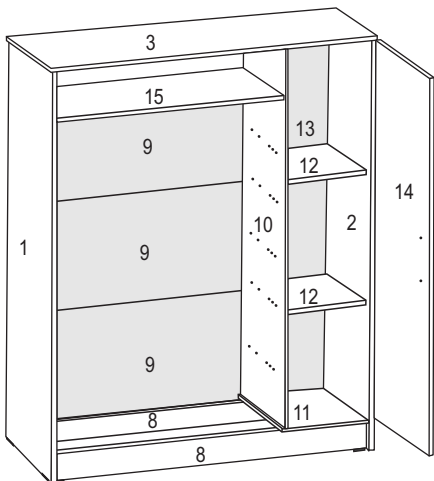




Peças do Produto

- 1 - Lateral esquerda / Lateral izquierda / Left side
- 2 - Lateral direita / Lateral derecha / Right side
- 3 - Tampo Superior / Tapa superior / Upper Top
- 4 - Lateral gaveta / Lateral cajón / Drawer side (10x)
- 5 - Traseiro gaveta / Trasero cajón / Drawer back (5x)
- 6 - Frente gaveta / Frente cajón / Drawer front (5x)
- 7 - Fundo gaveta / Fondo cajón / Drawer bottom (5x)
- 8 - Rodapé / Travessaño / Crossbar (2x)
- 9 - Costa / Dorso / Back panel (3x)
- 10 - Divisão / Divisória / Divider
- 11 - Tampo Inferior / Tapa inferior / Lower Top
- 12 - Prateleira / Estante / shelf (2x)
- 13 - Costa lateral / Dorso Lateral / Sid Back
- 14 - Porta / Puerta / Door
- 15 - Tampo do Vídio / Tapa / Top











FERRAGENS/ HERRAJE/ HARDWARE

A	Parafuso 3,5 x 40 c/chata Tornillo Screw		12
B	Parafuso 3,5 x 25 c/flangeada Tornillo Screw		14
C	Cantoneira 18x18 Esquina Cantoneira		12
D	Cavilha 6 x 30 Clavija Wood Peg		24
E	Prego 13 x 15 Clavo 13 x 15 Nail 13 x 15		24
F	Prego 10 x 10 Clavo 10 x 10 Nail 10 x 10		50
H	Sapata L 40 mm Tirador Handle		4
J	Cola Pegamento Glue		1
L	Etiqueta Logomarca Label		1
M	Puxador 128 mm Tirador Handle		7
N	Corrediça plástica Rieles Slides		1
P	Corrediça plástica Rieles Slides		10
Q	Rolete Pino Rolete		2
R	Parafuso 3,5 x 20 c/flangeada Tornillo Screw		2
S	Parafuso 3,5 x 12 c/Chata Tornillo Screw		32
T	Pino Suporte Prateleira 8x5,5		8
U	Porca cilíndrica Tuerca cilíndrica Cylindrical nut		6
V	Dobradiça 26 c/calço		2
X	Cavilha 8 x 30 Clavija Wood Peg		6
Z	Tapa Furo Tapa Top		6

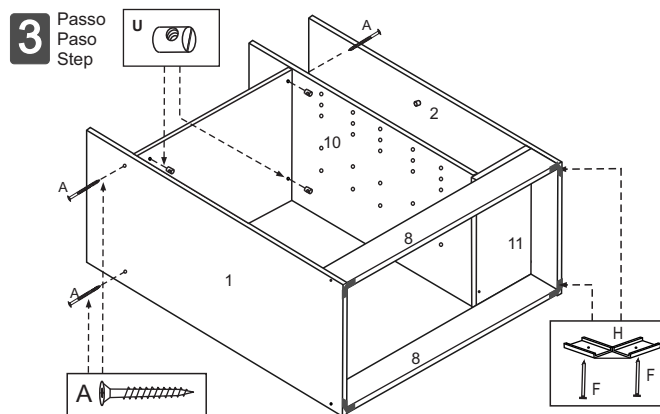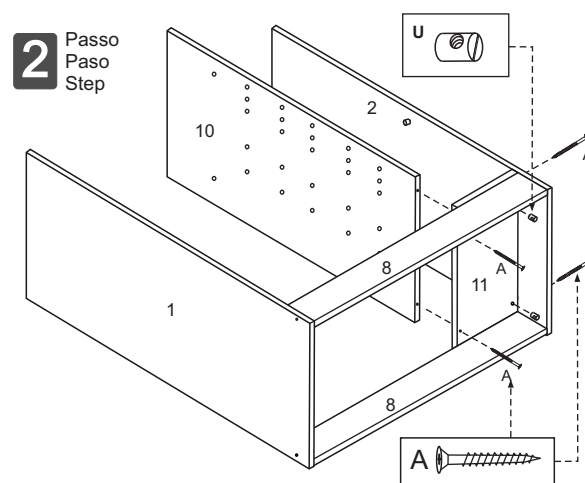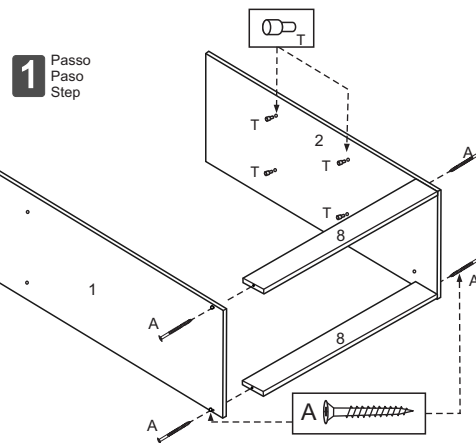

MONTAGEM GAVETA

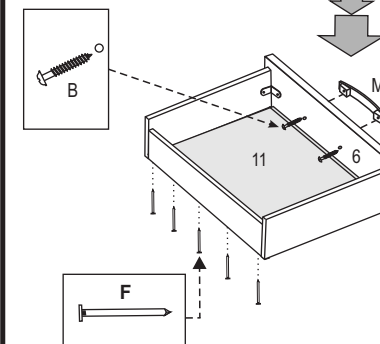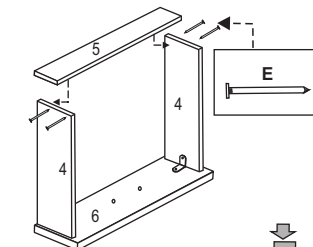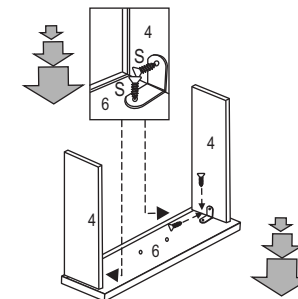
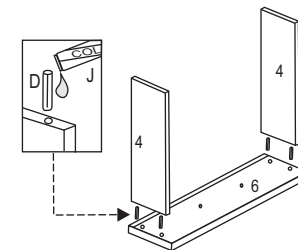


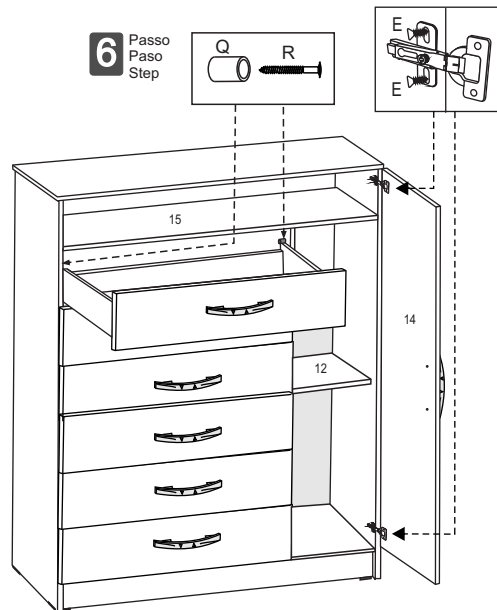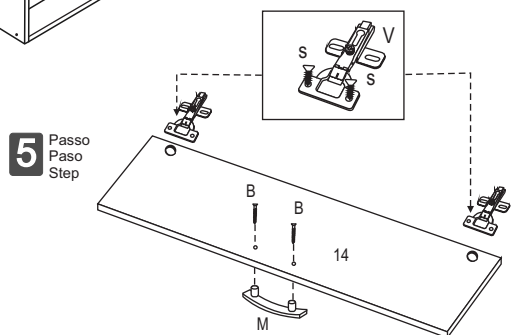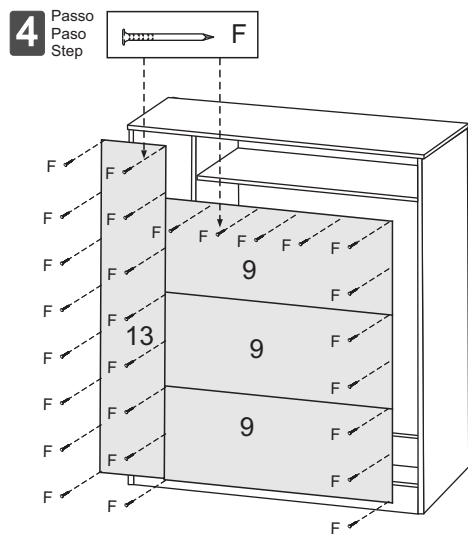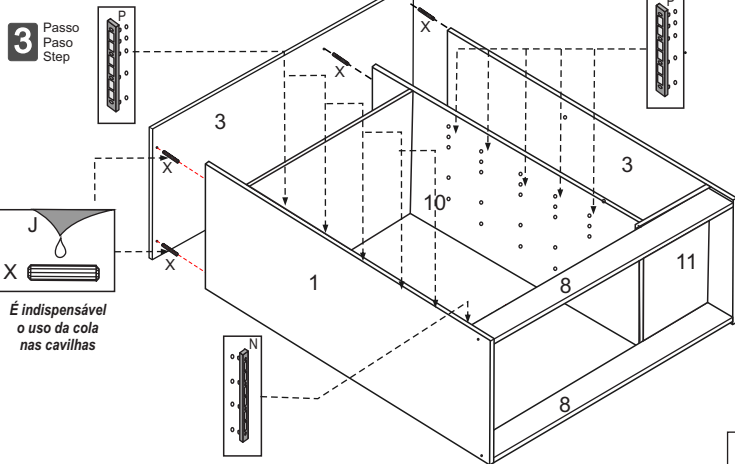

MANUAL DE MONTAGEM
INSTRUCCIONES DE ARMADO
ASSEMBLY INSTRUCTIONS



Cômoda Sapateira
Ref. 610 / 101

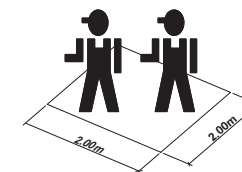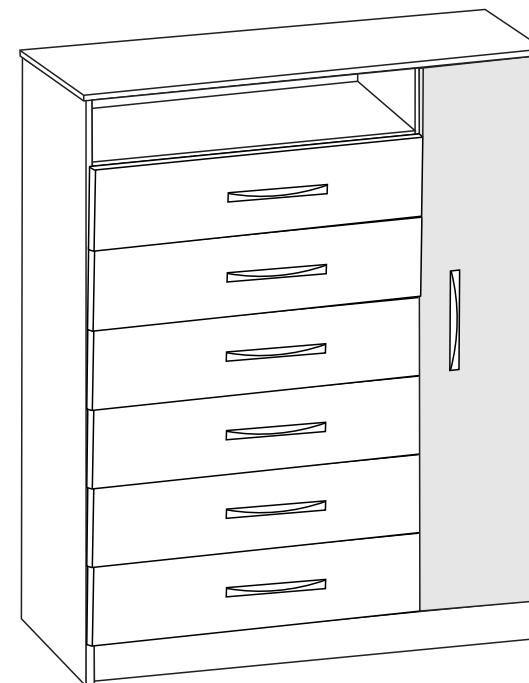

FERRAMENTAS NECESSÁRIAS
HERRAMIENTAS NECESÁRIAS
TOOLS NECESSARY



120 min

