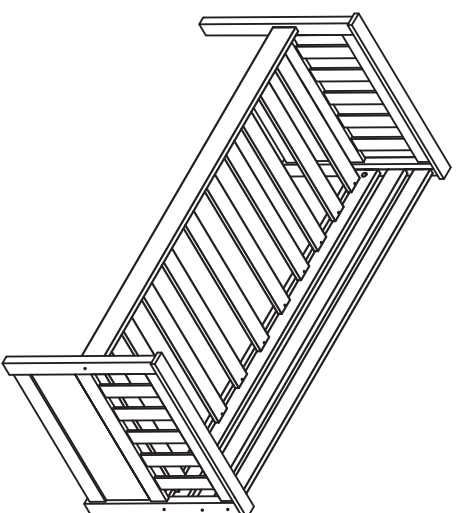







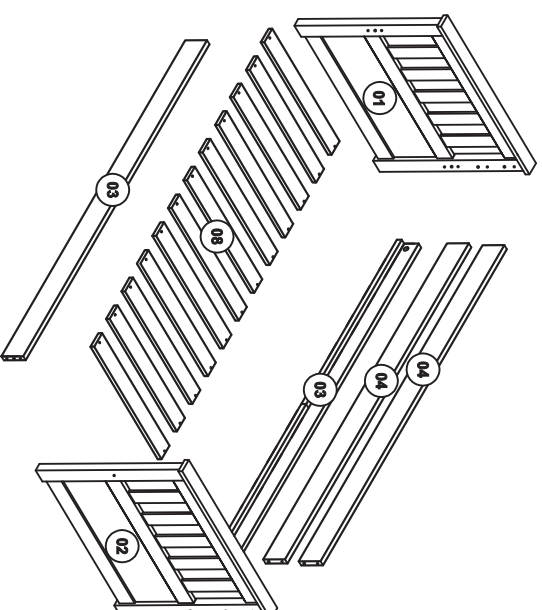






# Sofá Cama Mission

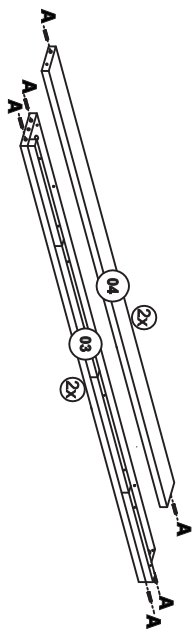



<b>A</b>	 Ø10x40mm	<b>12</b>
<b>B</b>	 Ø1/4"x80mm - 017	<b>04</b>
<b>C</b>	 Ø7x70mm - 17	<b>04</b>
<b>D</b>	 Ø3,5x30mm	<b>24</b>
<b>E</b>	 Ø1/4"x25mm	<b>04</b>
<b>F</b>	 4mm	<b>01</b>
<b>G</b>	 SPACER Ø8/80/80	<b>01</b>



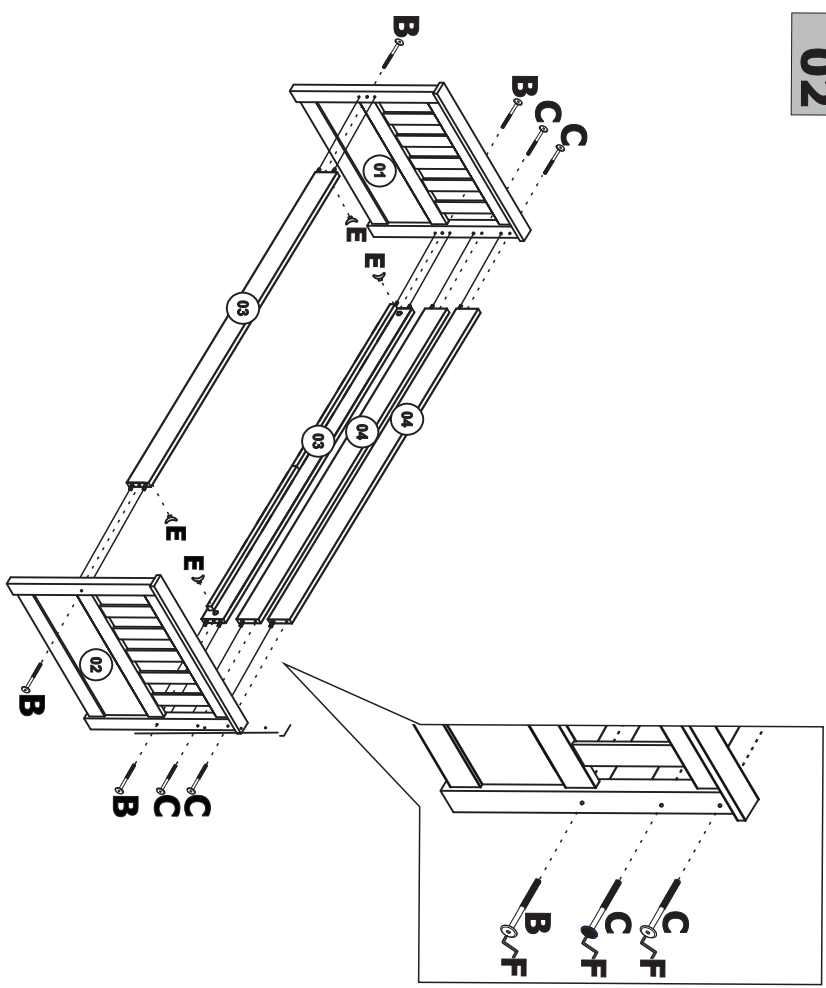

<b>0:45min</b>




**01**




**A**  **12X**  
 Ø10x40mm

**02**




**F**  **01X**  
 4mm

**E**  **04X**  
 Ø1,4x25mm

**B**  **04X**  
 Ø1,4x40mm - Ø17

**C**  **04X**  
 Ø7x70mm Cab. Ø17mm

**03**

**D**  **24X**  
 Ø3,5x30mm

